



BMW F series anable the key


CG-DI



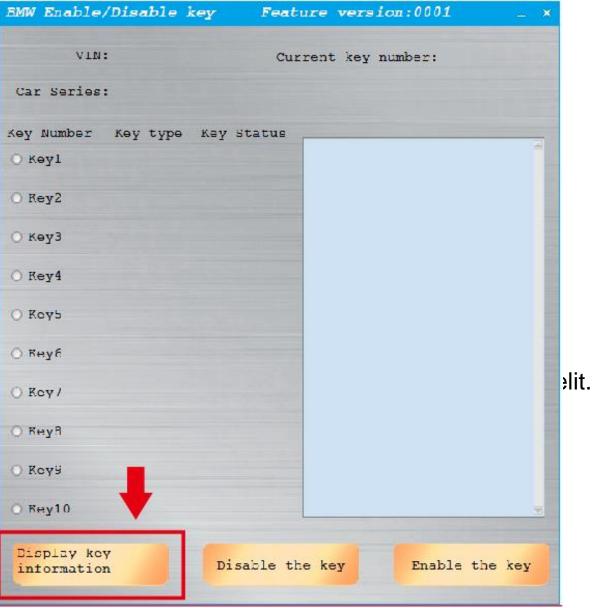

After enter the software then click it, show the information about the key

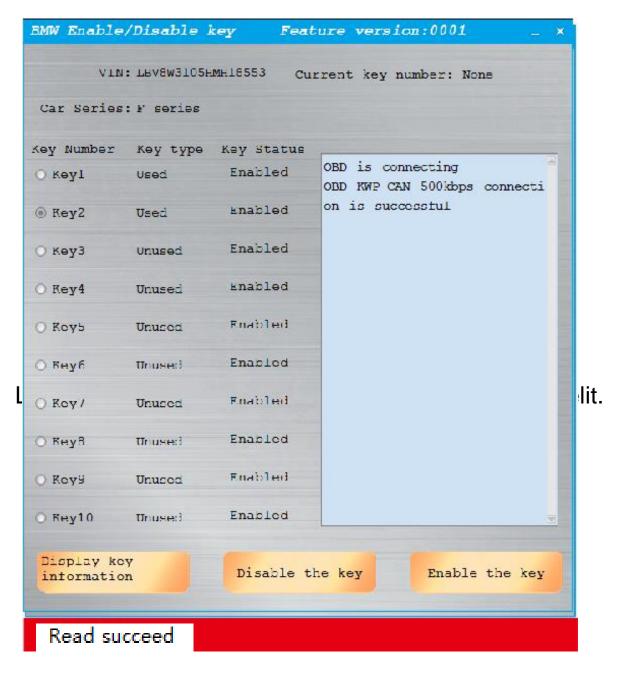

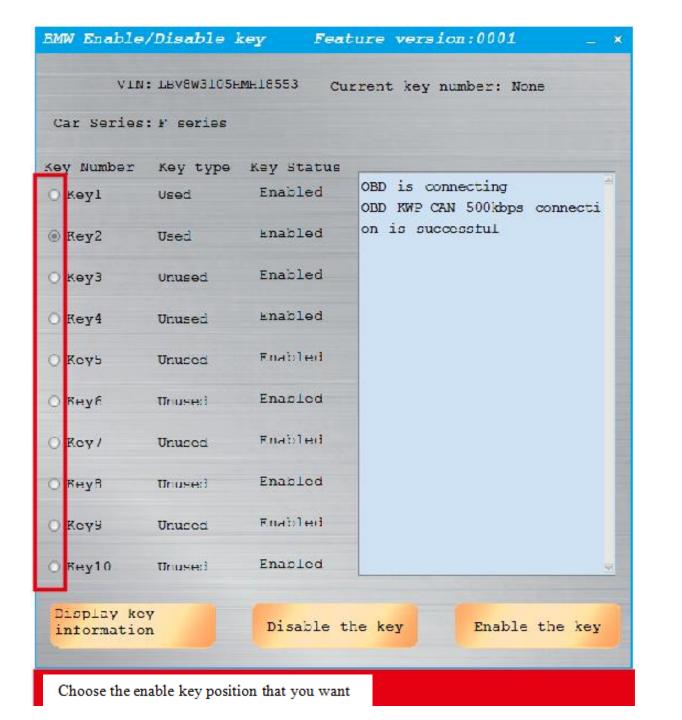

VIN	: LBV8W3105	-MH18553 Cu	rrent key r	number: None
Car Series	: F series			
Key Number	Key type	Key Status		2 31
O Keyl	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti on is successful	
⊕ Key2	Used	Enabled		
○ көуз	Unused	Enabled		
O Rey4	Unused	Enabled		
○ Keyb	Unused	Enabled		
⊖ кнуб	Unused	Enabled		
○ Koy/	Unused	Fnabled		
О кеуя	Unused	Enabled		_
○ Keyÿ	Unused	Enabled		1
О кеу10	Unused	Enacted		V
Display ke		Disable t	he key	Enable the key

BMW Enable/Disable key

X

Please put the key vertically in the key induction n area of the direction column



Prompt

Enable the key successfully, the re-enabled remote key may not immediately take effect on the vehicle, in this case through the manual key to open the vehicle, if necessary, through the emergency start function start the vehicle. To do this, keep the master key in the mark position and manipulate the start/stop button according to the instructions. Then the ignition key should be properly functioning again.

Confirm