
ZZMAZDA

DIAS Immobiliser

ECU identification

Fault codes

Erase DTC

Live data

Program function

Add a key

Erase keys

Program new system

Replace immobiliser ECU

Replace engine ECU

Reset immobiliser

Reset engine ECU

Read VIN

Check key

Check engine ECU

Program engine VIN

Program immobiliser VIN

Lock immobiliser

Actuation test

LED status