
JIANGLIN

Immobiliser

Fengshang

- ECU identification
- Fault codes
- Erase DTC
- Live data
- Set security code
 - Set security code
 - Input security code
- Program function
 - Program new system
 - Program keys
 - Erase keys
 - Erase all keys
 - Erase key 1
 - Erase key 2
 - Erase key 3
 - Erase key 4
 - Erase key 5
 - Replace immobiliser ECU
 - Replace engine ECU
 - Program immobiliser VIN
 - Program engine VIN
 - Reset engine ECU
 - Reset immobiliser

Fenghua

- ECU identification
- Fault codes
- Erase DTC
- Live data
- Set security code
 - Set security code
 - Input security code
- Program function
 - Program new system
 - Program keys
 - Erase keys
 - Erase all keys
 - Erase key 1
 - Erase key 2
 - Erase key 3
 - Erase key 4
 - Erase key 5

- Replace immobiliser ECU
- Replace engine ECU
- Program immobiliser VIN
- Program engine VIN
- Reset engine ECU
- Reset immobiliser

X5-Petrol car

- ECU identification
- Fault codes
- Erase DTC
- Live data
- Set security code
 - Input security code
 - Set security code
- Program function
 - Program new system
 - Replace immobiliser ECU
 - Replace engine ECU
 - Program keys
 - Program engine VIN
 - Program immobiliser VIN
 - Reset engine ECU
 - Reset immobiliser
 - Erase keys

X6-Petrol car

- ECU identification
- Fault codes
- Erase DTC
- Live data
- Set security code
 - Input security code
 - Set security code
- Program function
 - Program new system
 - Replace immobiliser ECU
 - Replace engine ECU
 - Program keys
 - Program engine VIN
 - Program immobiliser VIN
 - Reset engine ECU
 - Reset immobiliser
 - Erase keys

X8

- Delphi Immobiliser

ECU identification
Fault codes
Erase DTC
Live data
Set security code
 Input security code
 Set security code
Program function
 Program new system
 Replace immobiliser ECU
 Replace engine ECU
 Program keys
 Program engine VIN
 Program immobiliser VIN
 Reset engine ECU
 Reset immobiliser
 Erase keys

Siemens Immobiliser

ECU identification
Fault codes
Erase DTC
Live data
Set security code
 Set security code
 Input security code
Program function
 Program new system
 Program keys
 Erase keys
 Erase all keys
 Erase key 1
 Erase key 2
 Erase key 3
 Erase key 4
 Erase key 5
 Replace immobiliser ECU
 Replace engine ECU
 Program immobiliser VIN
 Program engine VIN
 Reset engine ECU
 Reset immobiliser

X9

Delphi Immobiliser

ECU identification

Fault codes
Erase DTC
Live data
Set security code
 Input security code
 Set security code
Program function
 Program new system
 Replace immobiliser ECU
 Replace engine ECU
 Program keys
 Program engine VIN
 Program immobiliser VIN
 Reset engine ECU
 Reset immobiliser
 Erase keys

Siemens Immobiliser
 ECU identification
 Fault codes
 Erase DTC
 Live data
 Set security code
 Set security code
 Input security code
Program function
 Program new system
 Program keys
 Erase keys
 Erase all keys
 Erase key 1
 Erase key 2
 Erase key 3
 Erase key 4
 Erase key 5
 Replace immobiliser ECU
 Replace engine ECU
 Program immobiliser VIN
 Program engine VIN
 Reset engine ECU
 Reset immobiliser

PEPS

X5

Kuwe PEPS

Erase DTC

Program function
Program new system
Program keys
Program new PEPS
Program old PEPS
Program ESCL
Reset to factory mode

TungThih PEPS

Erase DTC

Program function
Program new system
Program keys
Program new PEPS
Program old PEPS
Program ESCL
Reset EMS
Program EMS

X7

TungThih PEPS

Erase DTC

Program function
Program new system
Program keys
Program new PEPS
Program old PEPS
Program ESCL
Reset EMS
Program EMS