Honda IMMO Emulator
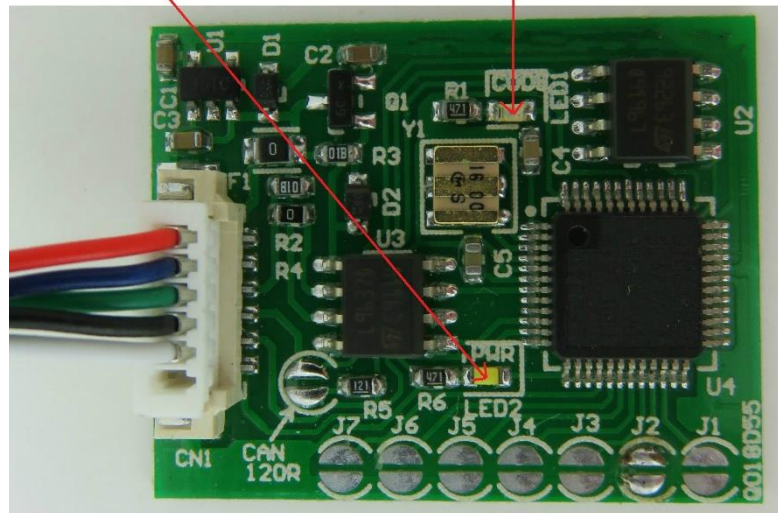
Red Cable: +12V   **Blue Cable: GND**
Green Cable: CODE **Black Cable: CAN-H**
White Cable: CAN-L

After adjusting,
LED-- It lights up constantly,
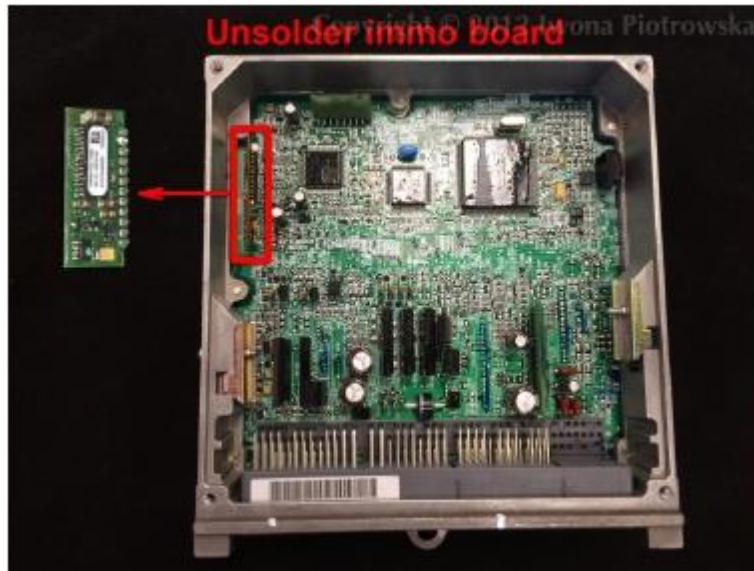and blink every two seconds

LED-- Power

HONDA Immo Emulator
In Universal Emulator, solder jumpers J2, J3 and J6
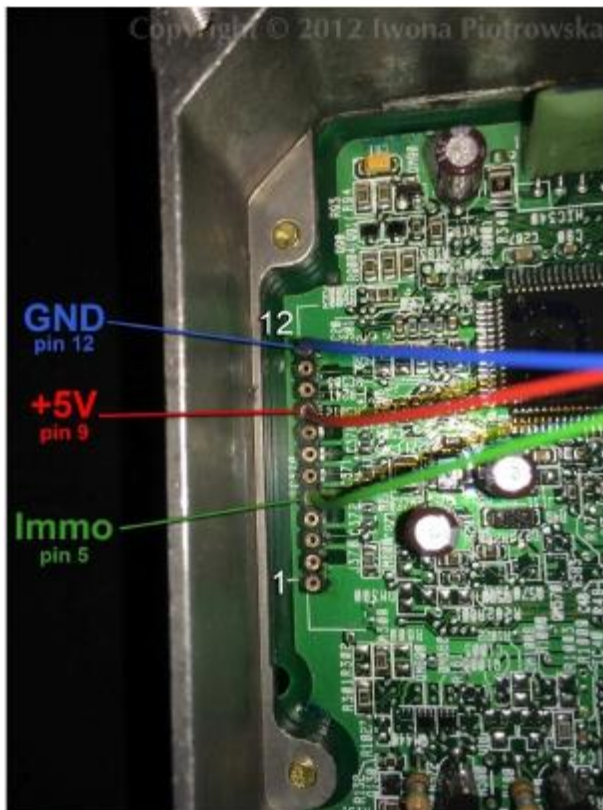
USE

Honda: Accord, CRV, Civic and other
(production year1999 - 2002)

Location
of ECU

The emulator only works with ECU that has got immo board equipped with 26-pin processor with a lable

Unsolder this immo board as shown in the picture above

In the place of the immo board, solder in the emulator

Example connection diagram of
Universal emulator

Before starting the car, disconnect the plug from immo box!!!

ECU Bosch M4.6.1
0 261 204 830

**Honda Accord
1.6i 1999 year**

Unsolder !!!

Disconnect

Warning!!!

Due to possible construction changes of cars，check signals with multimeter in the ECU plug.

Universal Auto Immo Emulator User Manual --- Honda Immo Emulator