


Suzuki with 93C56 memory Immo Emulator

Red Cable: +12V Blue Cable: GND
Green Cable: CODE Black Cable: CAN-H
White Cable: CAN-L

After adjusting,
LED-- It lights up constantly,
and blink every two seconds

LED-- Power


In Universal Emulator
solder jumpers **J1, J3 and J6**

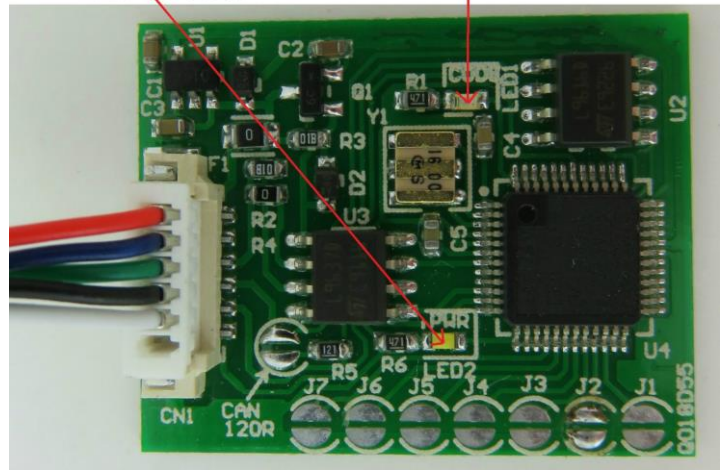


USE

Denso ECU with 93C56 memory and 29F200 flash.

The car must have 4C or 4D key.

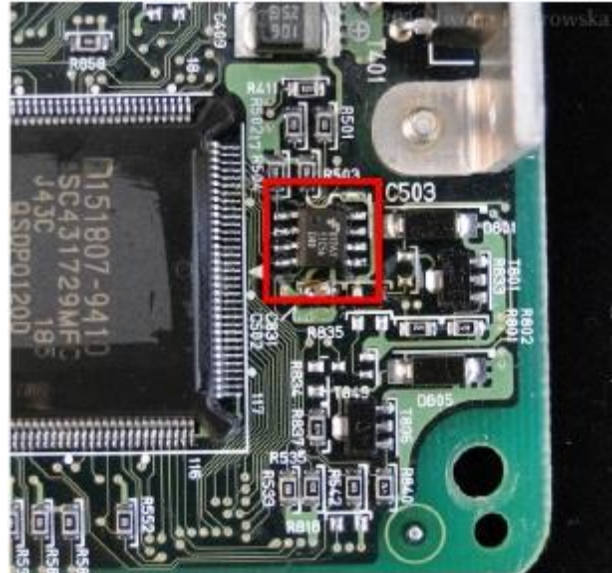

Find **93C56** memory in ECU

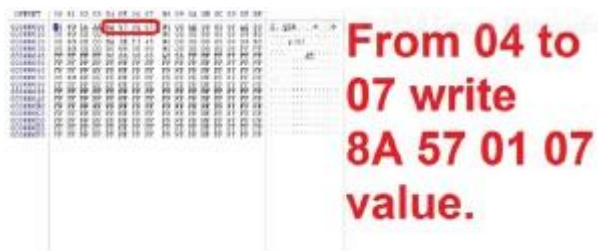

In **93C56** memory write **8A 57 01 07** values in addresses from **04** to **07**

Connection diagram examples




Immo line e.g. socket C pin 7

In different ECU types, the immo line can be in different pins. You check connection between ECU pin and pin 9 of 16-pin OBD socket with a multimeter.

Disconnect immo box!

Subaru Justy 1.3 4WD 2000/2001

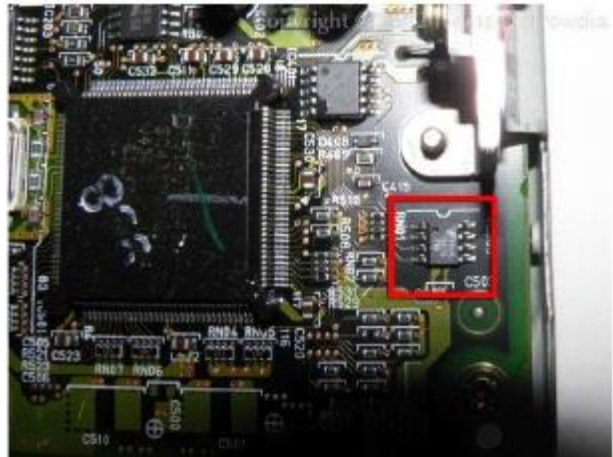


Find **93C56** memory in ECU

8A 57 01 07

OFFSET	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F	
00000000	00	00	84	A1	8A	57	01	07	00	80	EC	51	00	68	EC	51	... "54... #0... #0
00000010	00	00	00	00	00	00	00	00	00	80	00	00	00	00	00	00	...
00000020	00	00	00	00	11	23	04	68	FF	FF	FF	FF	FF	FF	FF	FF	... c..
00000030	FF	FF	FF	FF	FF	FF	FF	FF	00	00	00	00	00	00	00	FF	FF
00000040	00	00	00	00	00	00	00	00	A5	5A	FF	FF	FF	FF	FF	FF	... AZ...
00000050	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
00000060	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
00000070	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
00000080	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
00000090	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
000000A0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
000000B0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
000000C0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
000000D0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
000000E0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...
000000F0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	...

In **93C56** memory
write **8A 57 01 07** values in addresses from **04** to **07**

Connection diagram examples

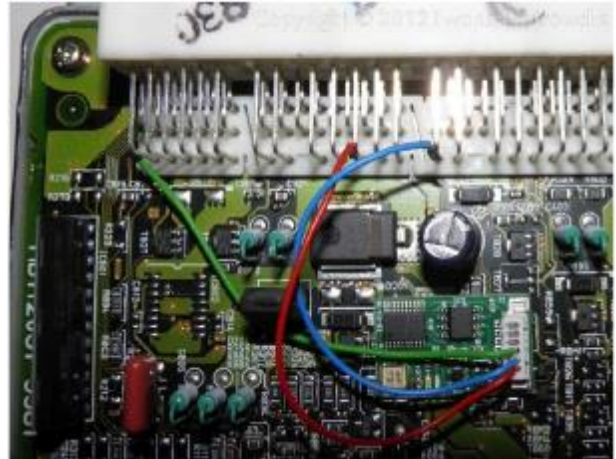

Disconnect immo box!



Warning!!!

Due to possible construction changes of cars ,
check signals with multimeter in the ECU plug.