

# SuperVAG

## How to add reading coil to SVG 149



### WHAT YOU NEED

- Crimping tool
- add-on cable SVG 149
- Reading coil
- Gold pin 2x into reading coil (bigger pin)
- Silver pin 2x into terminal (smaller pin)
- Cable 0,25mm<sup>2</sup>
- Pliers



Use pliers to remove the cable ties on blue terminal.




Prepare 2x gold pin, 2x silver pin, 2x cable and crimping tool.




Use crimping tool to mount pins on the cable.


**3.**

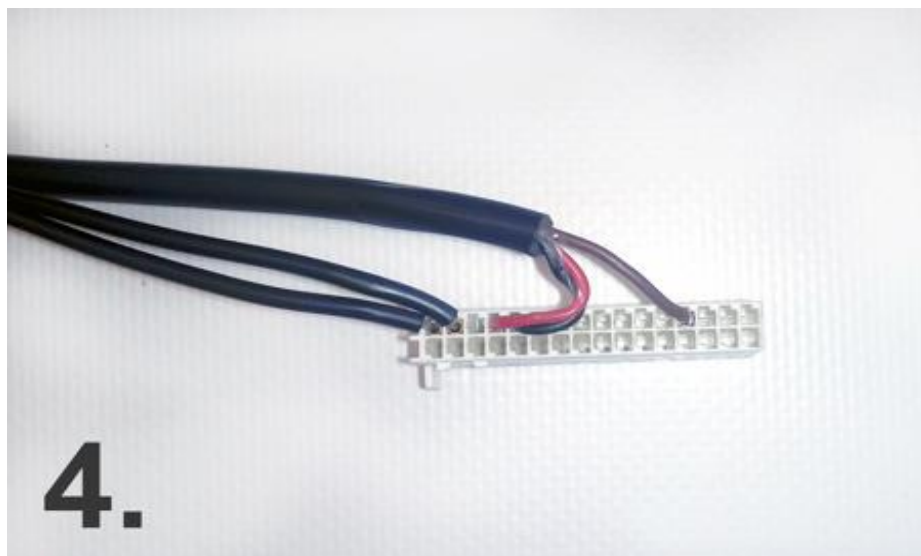


**On 32 pin terminal connect bigger silver pins on position 7 and 8.**

You can commute this two cables.

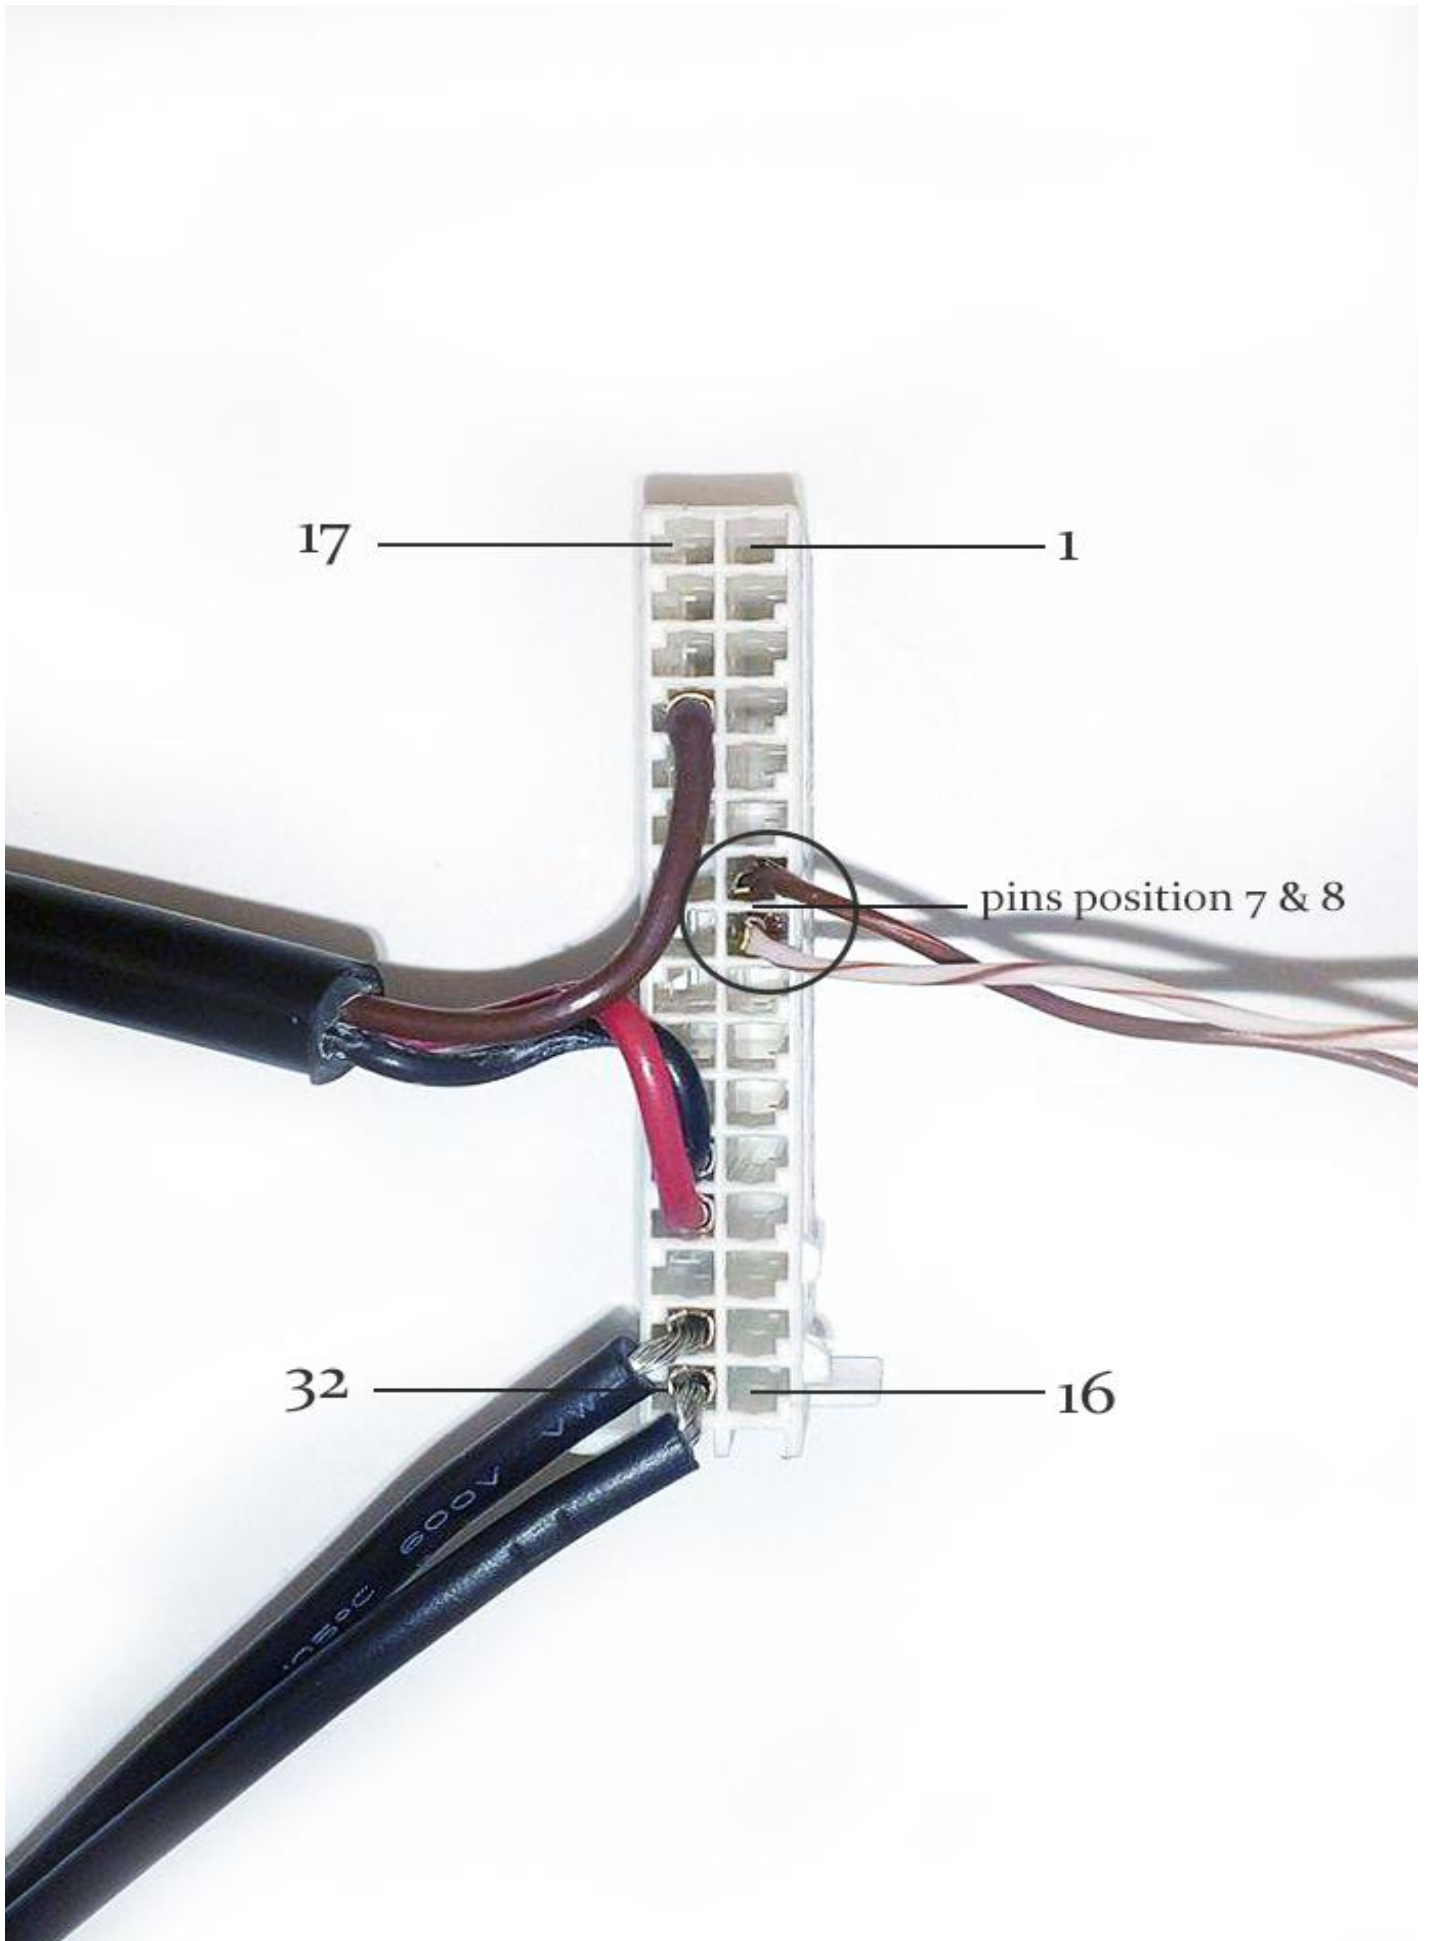


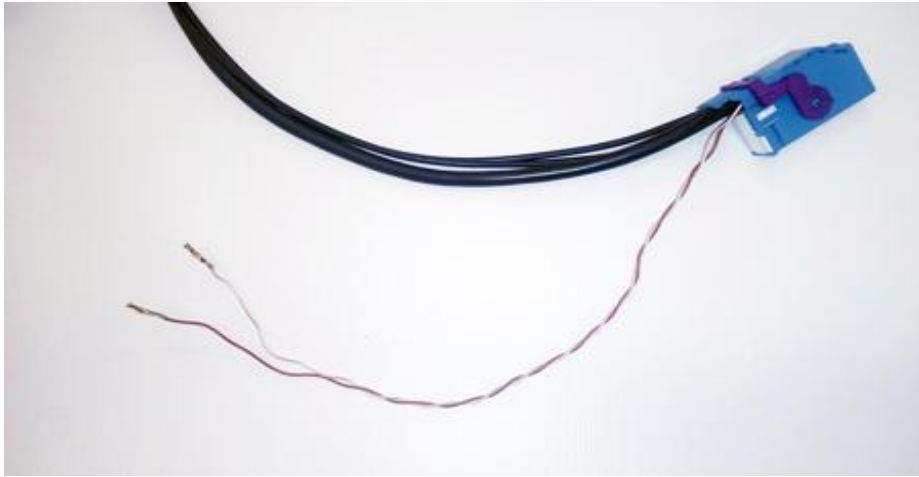

Connect two gold pins into reading coil. You can commute them.

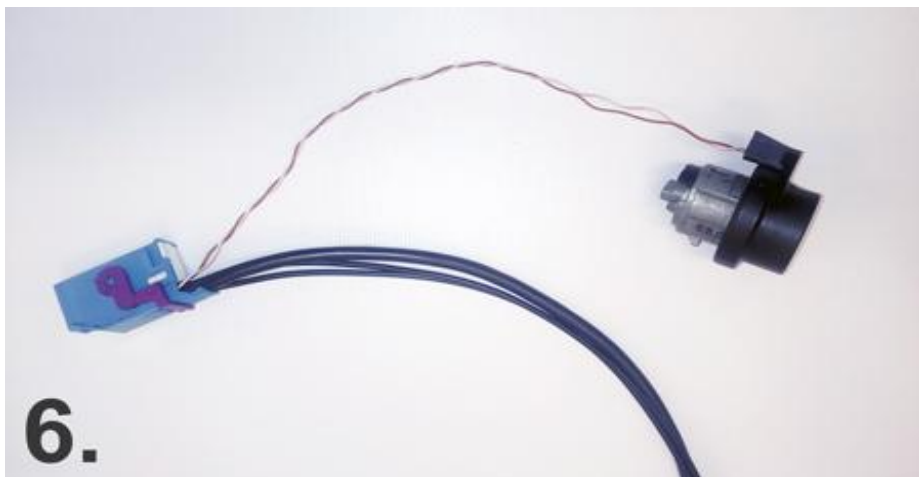

Return back cover and fix it with cable ties.

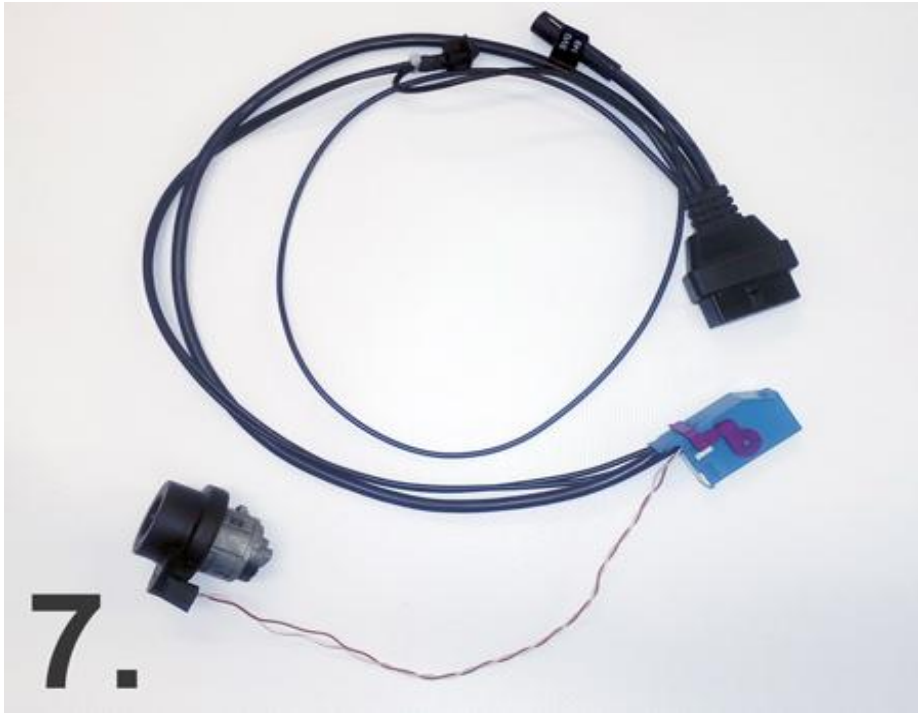

**Reading coil can be used to reading of key transponder and to key learning on a table. For example you do not need to put in dashboard into a car to try key learning after solving of All Key Lost Situation. You can try it first on a table.**